


3520

Control panel for electric lock 12VDC

Product Code	Power Supply	Codification	Activation time	Output 1	Output 2	Dimensions
PSR-3520	12VDC up to 6A	Rolling	1-180S	Electric door strike up to 3A	Magnetic lock	92X60X30

3520, can be installed in all types of electric locks, electric door strikes, magnetic lock, igniter, etc. External power supply 12VDC up to 6A depending on the electrical locks connected.

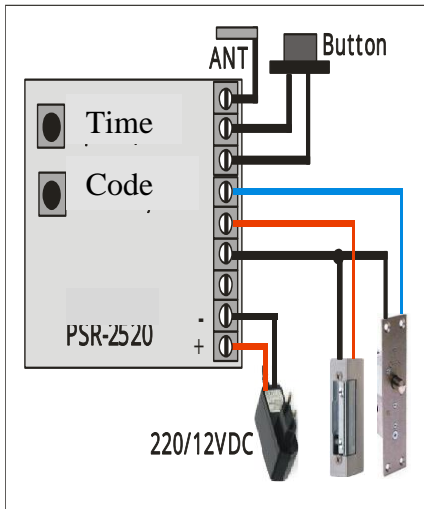

FUNCTIONS - INSTALLATION

Power Supply 12V DC:

In terminals 1 (+12V), 2 (-12V)

Relays output:

1o channel electric door strike: In terminals 4 & 5

2o channel magnetic lock: In terminals 4 & 6

External button: In terminals 7 & 8

Activation time (1-180 Sec.): Press and keep pressed the button

TIME in order to set the seconds for the activation time

Antenna: Place the antenna outside the plastic box.

Adding a new transmitter with the control panel CODE button:

Press the CODE button and the RED

indication light goes ON (after a small delay). Leave it and during the next 3 seconds, press the desired transmitter channel button until the RED indication light blinks and goes OFF. The new transmitter is saved. Follow the same procedure to program more (up to 300 transmitters) new transmitters.

Adding a new transmitter remotely: The motor is fully closed or open. Press a working transmitter button (already in memory) to start the motor working and hold it pressed until the motor stops. When it stops, leave it and press the new transmitter button immediately. The new transmitter is saved. Repeat steps to program more transmitters remotely. When the memory is full (300 transmitters) you cannot add more new transmitters.

