



**SERIES 40**

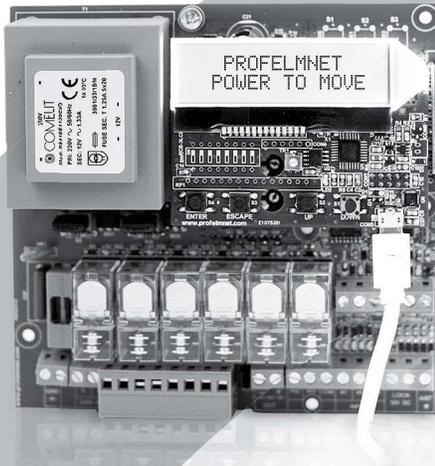


4114


4050

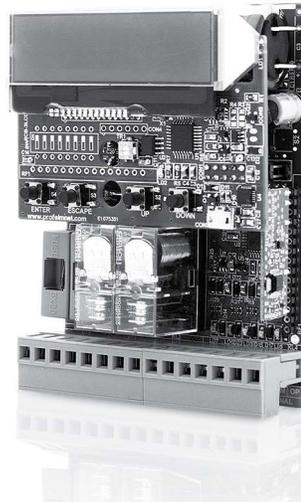

4033

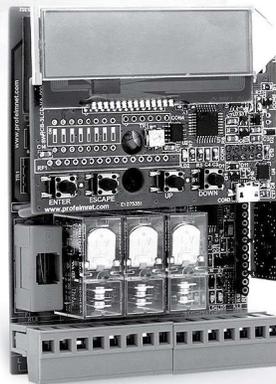

4150

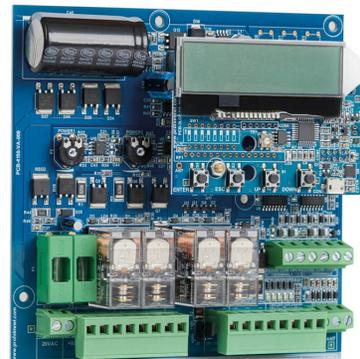



THE POWER TO MOVE

# INDEX

Index	3
Introduction series 40, CE Declaration of Conformity	4
Warnings for the installer,	
Waste of electrical and electronic devices (WEEE)	5
4033 Wiring diagram, Technical characteristics	6 - 7
4050 Wiring diagram, Technical characteristics	8 - 9
41 14 Wiring diagram, Technical characteristics	10 - 11
4150 Wiring diagram, Technical characteristics	12 - 13
LCD DISPLAY Configuration menu	14 - 19
Settings - Configuration	14
MOTOR TYPE (model 4033)	14
TERMINAL SWITCHES	14
PHOTOCELL	14
PHOTOCELL 1 (model 41 14)	14
PHOTOCELL 2 (model 41 14)	14
BUTTON	14
BLINKER	14
LOCK (model 41 14)	14
DELAY TIME (model 41 14)	14
SAFETY EDGE	14
MOTOR BRAKE (model 4033)	14
DECELERATION	15
OPERATING TIME	16
CODIFICATION	16 - 17
REMOTES	18
MOTOR DIRECTION	18
AUTO - CLOSING	18
INITIAL FORCE	18
PEDESTRIAN TIME	19
PIN	19
LANGUAGE	19
TROUBLE-SHOOTING	

## SERIES 40

Series 40 is a state of the art LCD integrated automation product line. A combination of technology, innovation and upgraded features. With series 40, Profelmnet presents a totally sophisticated product line in terms of capabilities and functions, maintaining the universal size of the board. User friendly menu, quick installation, one type of board for all types of installations, durability in hardware, security for the installer.

Series 40 models are:

- 4033** automation for rolling shutters, sliding gates, one-leaf swing gates, barriers, garage doors 230VAC
- 4050** automation for sliding gates, one-leaf swing gates, barriers, garage doors 24VDC
- 4114** automation for double motors 230VAC
- 4150** automation for double motors 24 VAC

## CE DECLARATION OF CONFORMITY

The manufacturer L.PSARROS & SIA OE declares that the products 4050, 4033, 4114 are according to European Directives requirements of **RADIO EQUIPMENT DIRECTIVE (RED) 2014/53/EU** and **ELECTROMAGNETIC COMPATIBILITY EMC 2004/108/EC**

and satisfies all the applicable standards to the product within these directives as follows:

EN 62311:2008  
EN 62368-1: 2014  
EN 61000-6-1 : 2007  
EN 61000-6-3: 2007 + A1: 2011  
EN ETSI 301 489-1  
EN ETSI 301 489-3  
EN ETSI 300 220-2  
EN ETSI 300 220 -3-1  
EN ETSI 300 220 -3-2

*Profelmnet*  
**L. PSARROS AND SIA OE**  
**ELECTRONIC AUTOMATION**  
LEOF. AGIOU DIMITRIOU 286A  
17342 ATHENS GREECE  
VAT NUMBER EL800845047  
TEL. 0030 210 9850244

**LABROS PSARROS**

Electronics Engineer  
Technical Director

## WARNING FOR THE INSTALLER

1. ATTENTION! To ensure the safety of people, it is important that you read all the following instructions. Incorrect installation or incorrect use of the product could cause serious harm to people
2. Carefully read the instructions before beginning to install the product
3. This product was designed and built strictly for the use indicated in this documentation. Any other use, not expressly indicated here, could compromise the good condition/operation of the product and/or be a source of danger
4. Store these instructions for future reference
5. Before attempting any job on the system, cut out electrical power
6. Make sure that a differential switch with threshold of 0.03 A is fitted upstream of the system
7. Do not in any way modify the components of the automated system
8. Do not allow children or adults to stay near the product while it is operating
9. Keep remote controls or other pulse generators away from children, to prevent the automated system from being activated involuntarily
10. The user must not attempt any kind of repair or direct action whatever and contact qualified personnel only
11. Profelmnet as a manufacturer reserves the right to make changes to the product without notice
12. Anything not expressly specified in these instructions is not permitted


## WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

In accordance with the European Directive 2002/96 / EC about waste electrical and electronic equipment (WEEE), the presence of this symbol (figure 1) on the product(s) or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Alternatively, in some countries, you may be able to return your products to your local retailer upon purchase of an equivalent new product.



# 4033

Wiring diagram for automation of rolling shutters, sliding gates, one-leaf swing gates, barriers, garage doors 230VAC

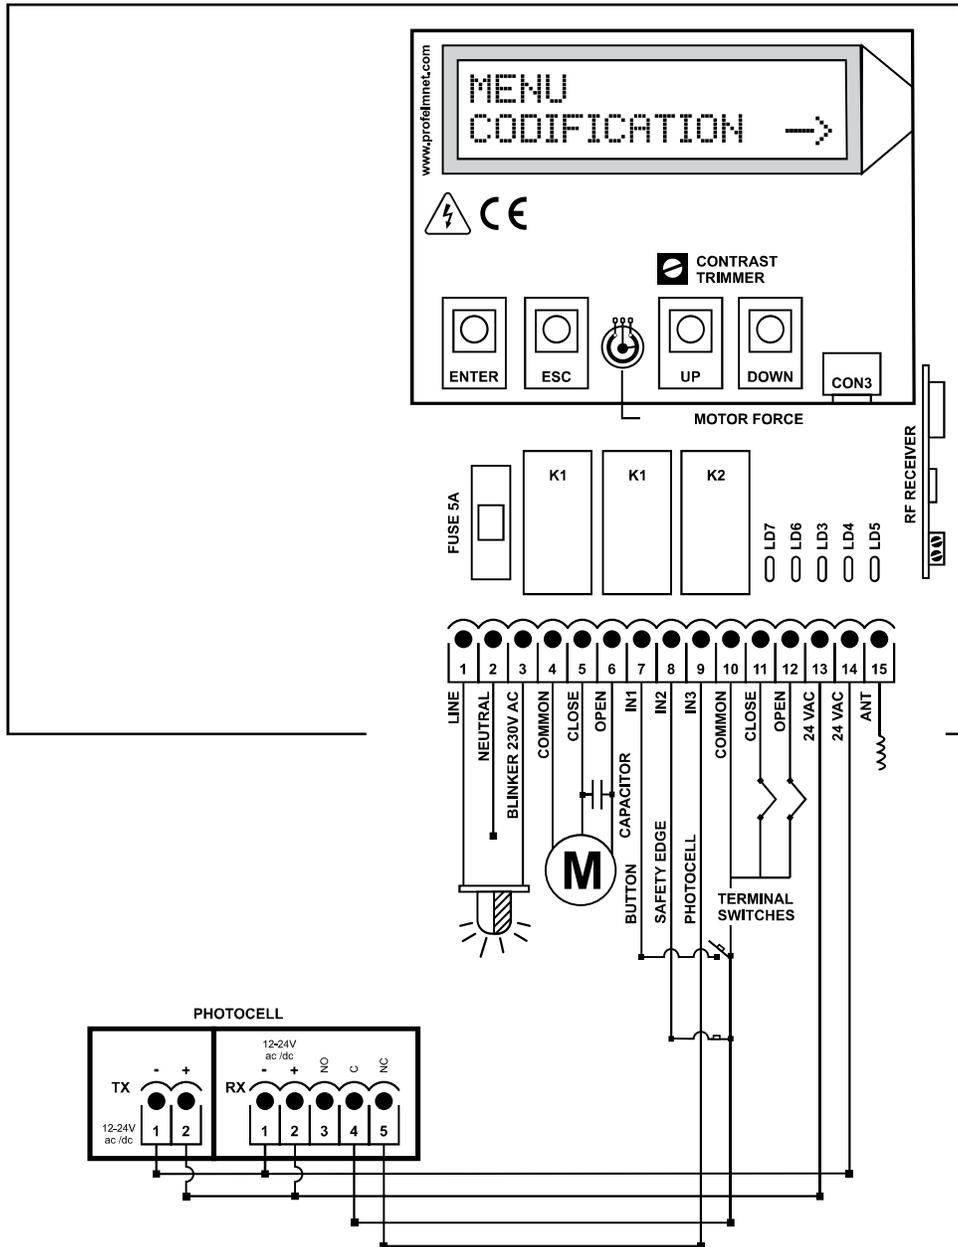

## 4033 Technical characteristics


Power supply	230VAC /50 Hz
Max. Motor power	1200W
Box dimensions	9.5cm X 4.5cm X 13cm
Control board dimensions	7.5cm X 3cm X 10.5cm
Fuse 230VAC	5A
Fuse 24VAC	150mA
Blinker light power supply	230VAC
Photocell power supply	24VAC/100 mA
Remotes memory	removable memory up to 300 remotes
Temperature	-20° C + 60° C

### Electrical connections

1	Line
2	Neutral
1+3	Blinker 230VAC
4	Motor common
5	Motor close
6	Motor open
7+10	Button - NO
8+10	Safety edge - N.C
9+10	Photocell - N.C
10	Terminal switches & accessories common
11+10	Close terminal switch - N.C
12+10	Open terminal switch - N.C
13+14	Accessories power supply 24VAC
15	Antenna

# 4050

Wiring diagram for automation for automation of sliding gates, one-leaf swing gates, barriers, garage doors 24VDC

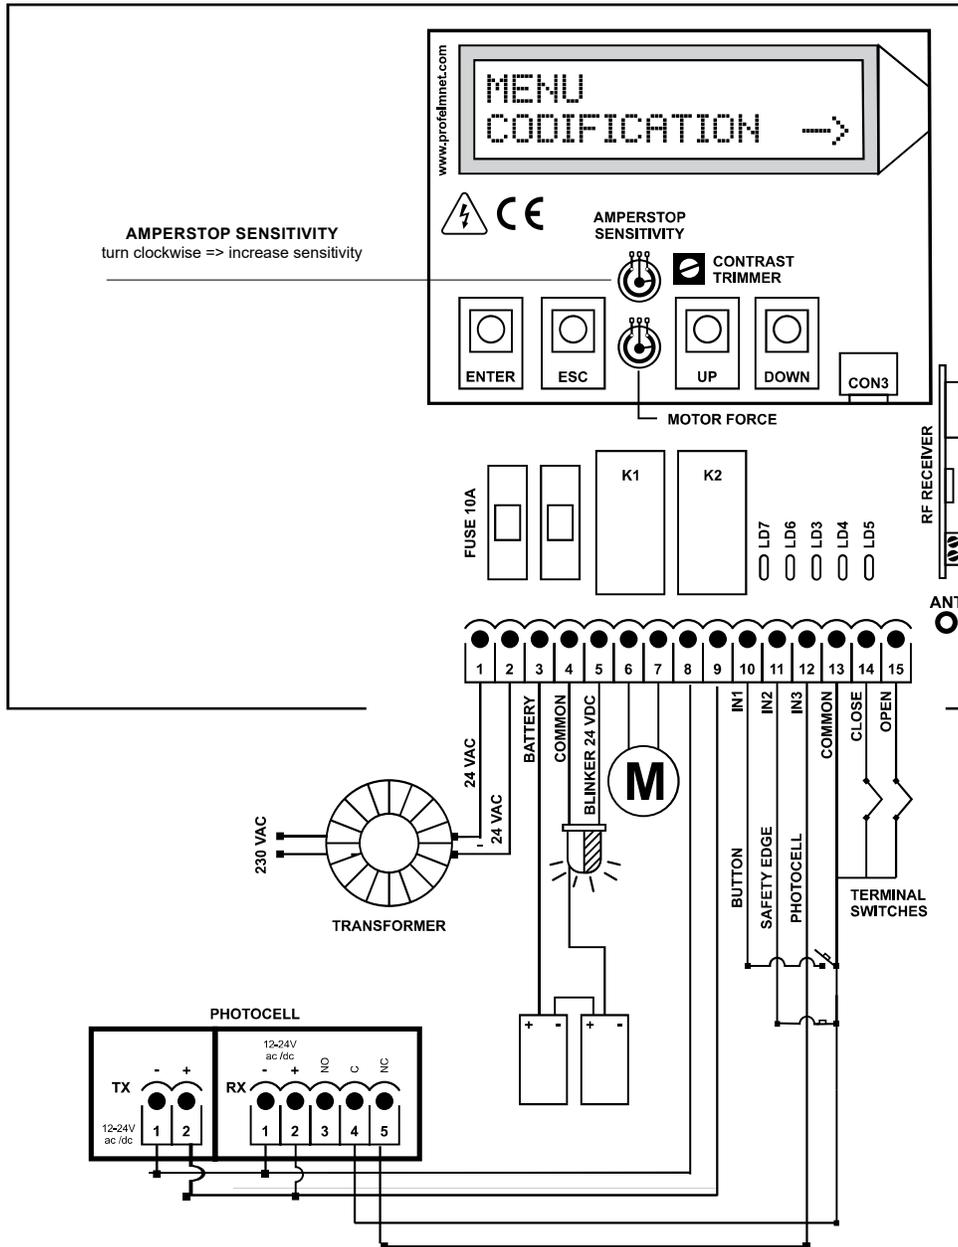


## 4050 Technical characteristics

Power supply	24VAC
Max. Motor power	200W
Box dimensions	9.5cm X 4.5cm X 13cm
Control board dimensions	7.5cm X 3cm X 10.5cm
Fuse 24VAC	10A
Battery fuse	10A
Blinker power supply	24VDC /500mA
Photocell power supply	24 VDC / 100mA
Battery type	2 X 12V /6Ah in
Type of transformer	Toroidal 20-24VAC /130VA
Remotes memory	Removable memory up to 300 remotes
Temperature	-20°C + 60°C

### Electrical connections

1	+ 20VAC
2	-20VAC
3-4	Battery
4	Common Battery & Blinker Light
5-4	Blinker light
6	Motor close
7	Motor open
8	24VDC +
9	24VDC -
10+13	Button - N.O
11+13	Safety edge - N.C
12+13	Photocell - N.C
13	Common accessories & terminal switches
14 +13	Close terminal switches - N.C
15 +13	Open terminal switches - N.C

# 4114 Wiring diagram for automation of double motors 230VAC

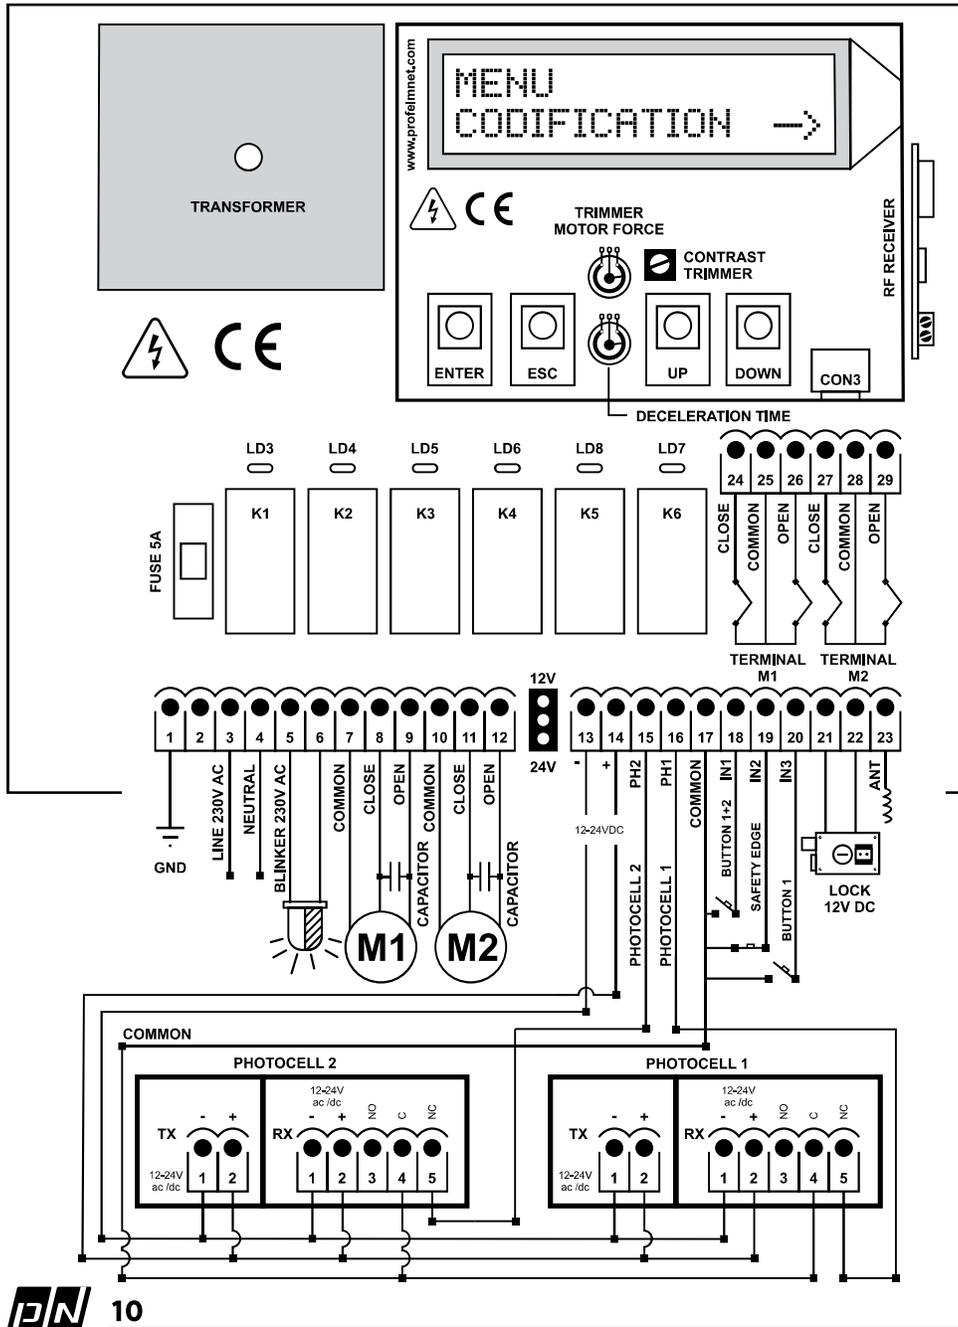


## 4114 Technical characteristics

Power supply	230VAC /50 Hz
Max. Motor power	2400W in total
Box dimensions	25cm X 19.5cm X 10cm
Control board dimensions	13cm X 13.5cm X 4.5cm
Fuse 230VAC	5A
Fuse 12-24VDC	500mA
Blinker light power supply	230VAC
Photocell power supply	12 or 24VDC (jumper)
Lock power supply	12VDC
Remotes memory	Removable memory up to 300 remotes
Temperature	-20°C + 60°C

### Electrical connections

1	Ground	16+17	Photocell 1
2	Not used	17	Common accessories
3	Line	18+17	Button 1+2 - N.O
4	Neutral	19+17	Safety edge - N.C
5-6	Blinker light	20+17	Button motor 1- N.O
7	Common motor 1	21+22	Lock 12VDC 5Watt
8	Close motor 1	23	Antenna
9	Open motor 1	24+25	Close terminal switch motor 1-N.C
10	Common motor 2	25	Common terminal switch motor 1
11	Close motor 2	26+25	Open terminal switch motor 1-N.C
12	Open motor 2	27+28	Close terminal switch motor 2-N.C
13-14	Power supply 12-24VDC	28	Common terminal switch motor 2
15+17	Photocell 2	29+28	Open terminal switch motor 2-N.C

# 4150 Wiring diagram for automation of double motors 24VAC

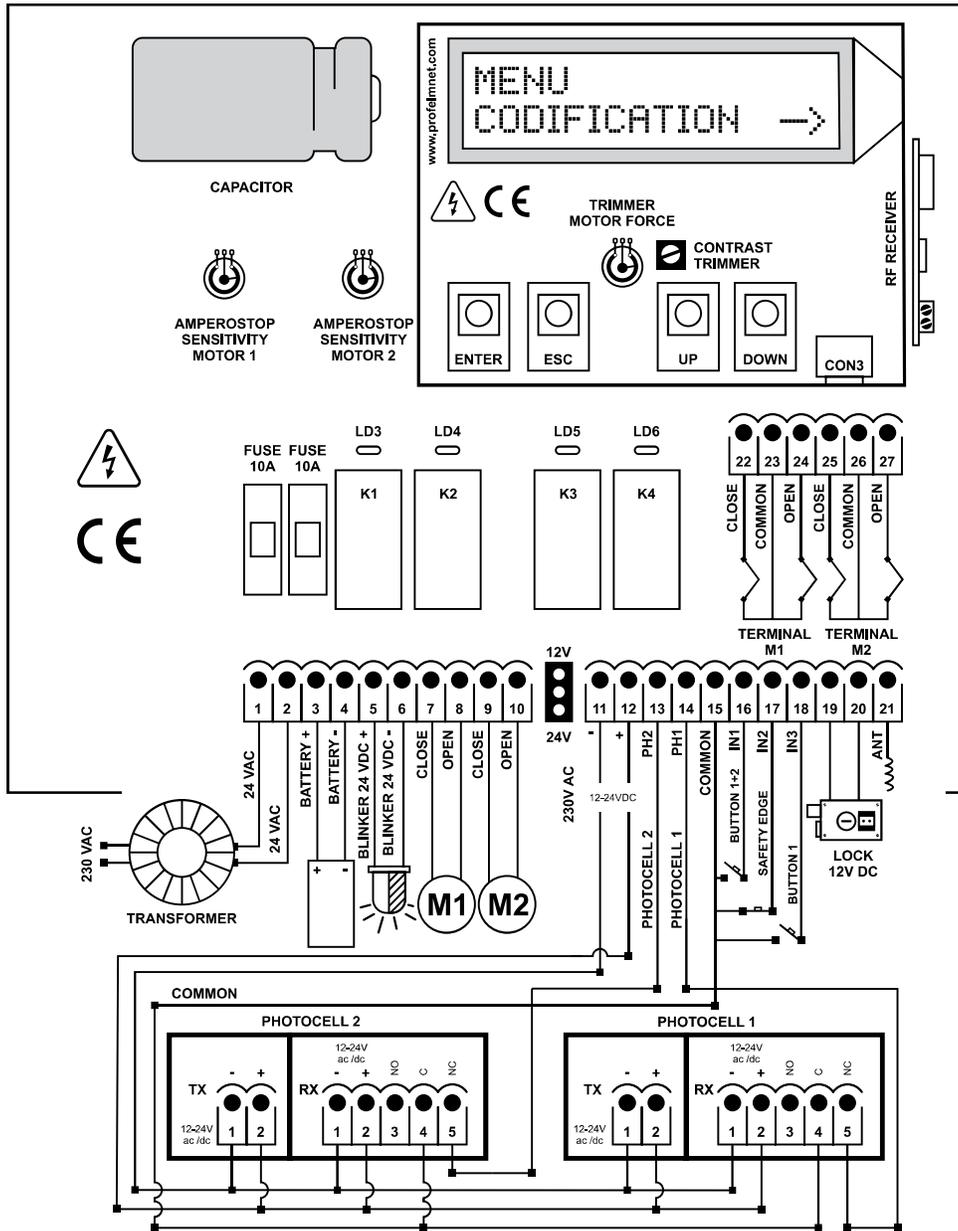

## 4150 Technical characteristics

Power supply	24 VAC
Max. Motor power	400W in total
Box dimensions	25cm X19.5cm X10cm
Control board dimensions	13cm X13.5cm X 4.5cm
Fuse 24VAC	10A
Fuse battery	10A
Fuse 12-24VDC	500mA
Blinker light power supply	24VDC
Photocell power supply Lock	12 or 24VDC (jumper)
power supply	12VDC
Fuse Lock	1A
Battery Type	2 X12V /6Ahr in series
Transformer type	Toroidal 20-24VAC/130VA
Remotes memory	Removable memory up to 300 remotes
Temperature	-20°C + 60°C


### Electrical connections

1	+ 20VAC	14+15	Photocell 1
2	- 20VAC	15	Common accessories
3	Battery +	16+15	Button 1+2 - N.O
4	Battery -	17+15	Safety edge - N.C
5	Blinker +	18+15	Button motor 1 - N.O
6	Blinker -	19+20	Lock 12VDC 5Watt
7	Motor 1 Close	21	Antenna
8	Motor 1 Open	22	Close terminal switch motor 1-N.C
9	Motor 2 Close	23	Common terminal switch motor 1
10	Motor 2 Open	24	Open terminal switch motor 1-N.C
11-12	Power supply 12-24VDC	25	Close terminal switch motor 2-N.C
13-15	Photocell 2	26	Common terminal switch motor 2
		27	Open terminal switch motor 2-N.C

## CONFIGURATION MENU

Series 40 has an advanced menu system using integrated keyboard and backlight LCD display on the board to make configuration and maintenance easy and fast. The logic of the programming is the same among the various models of series. The user follows the same steps and philosophy.

### MAIN LCD DISPLAY

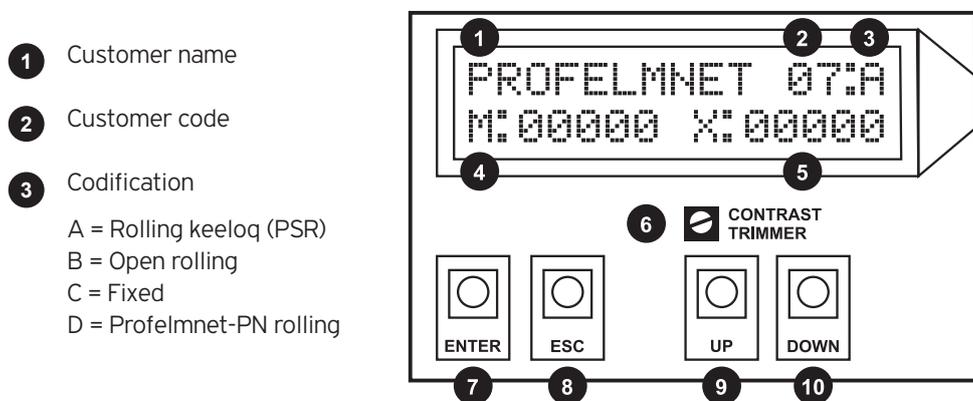

- 1 Customer name
- 2 Customer code
- 3 Codification
  - A = Rolling keeloq (PSR)
  - B = Open rolling
  - C = Fixed
  - D = Profelmnet-PN rolling

- 4 Number of control board's activation
- 5 Minutes of motor's operation
- 6 Trimmer of contrast adjustment  
The user is able to adjust the level of LCD DISPLAY contrast
- 7 Key ENTER:  
Enter the main menu and select /save configuration

- 8 Key ESC:  
Exit from the main menu or the sub-menus
- 9 10 Keys UP and DOWN:  
Navigation through the sub-menus and settings. The various settings alternate cyclically as the following table shows (table page 13)

**NOTE:** Before installation, the familiarization with the keyboard of LCD screen and configuration menu is suggested

# CONFIGURATION MENU

4033	4033	4050	4114/4150
<b>MOTOR TYPE</b>	<b>MOTOR TYPE</b>		
→ SHUTTER	→ SHUTTER		
→ SHUTTER DEAD-MAN	→ SHUTTER DEAD-MAN		
→ SHUTTER 2-CHANNELS	→ SHUTTER 2-CHANNELS		
→ SLIDING	→ SLIDING		
→ SWING	→ SWING		
→ BARRIER	→ BARRIER		
<b>CODIFICATION</b>	<b>CODIFICATION</b>	<b>CODIFICATION</b>	<b>CODIFICATION</b>
→ KEELOQ ROLLING	→ KEELOQ ROLLING	→ KEELOQ ROLLING	→ KEELOQ ROLLING
→ OPEN ROLLING	→ OPEN ROLLING	→ OPEN ROLLING	→ OPEN ROLLING
→ FIXED	→ FIXED	→ FIXED	→ FIXED
→ PROFELMNET	→ PROFELMNET	→ PROFELMNET	→ PROFELMNET
<b>REMOTES</b>	<b>REMOTES</b>	<b>REMOTES</b>	<b>REMOTES</b>
→ SAVE / SAVE CHANNEL ↑	→ SAVE	→ SAVE	→ SAVE
→ PEDESTRIAN SAVE / SAVE CHANNEL ↓	→ PEDESTRIAN SAVE	→ PEDESTRIAN SAVE	→ PEDESTRIAN SAVE
→ TOTAL DELETION	→ TOTAL DELETION →	→ TOTAL DELETION	→ TOTAL DELETION
→ USER DELETION	USER DELETION	→ USER DELETION	→ USER DELETION
<b>REMOTE COMMAND</b>	<b>REMOTE COMMAND</b>	<b>REMOTE COMMAND</b>	<b>REMOTE COMMAND</b>
<b>WIR. STORE</b>	<b>WIR.STORE</b>	<b>WIR.STORE</b>	<b>WIR.STORE</b>
<b>PHOTOCELL</b>	<b>TERMINAL SWITCHES</b>	<b>TERMINAL</b>	
<b>MOTOR DIRECTION</b>	<b>PHOTOCELL BRAKE</b>	<b>SWITCHES</b>	<b>TERMINAL SWITCHES</b>
<b>BUTTON</b>	<b>MOTOR DIRECTION</b>	<b>PHOTOCELL</b>	<b>PHOTOCELL 1</b>
<b>REV. MOVEMENT</b>	<b>BUTTON</b>	<b>MOTOR DIRECTION</b>	<b>PHOTOCELL 2</b>
<b>SAFETY EDGE</b>	<b>REV.MOVEMENT</b>	<b>BUTTON</b>	
<b>BLINKER</b>	<b>SAFETY EDGE</b>	<b>REV.MOVEMENT</b>	<b>BUTTON SAFETY EDGE</b>
	<b>BLINKER OPERATING</b>	<b>SAFETY EDGE</b>	<b>BLINKER LOCK</b>
<b>OPERATING TIME</b>	<b>TIME AUTO-CLOSING</b>	<b>BLINKER</b>	<b>OPERATING TIME AUTO-</b>
<b>AUTO-CLOSING</b>	<b>PEDESTRIAN TIME</b>	<b>OPERATING TIME</b>	<b>CLOSING DELAY TIME</b>
<b>PEDESTRIAN TIME</b>	<b>DECELERATION</b>	<b>AUTO-CLOSING</b>	<b>RE.CLOSING</b>
		<b>PEDESTRIAN TIME</b>	<b>DECELERATION</b>
		<b>DECELERATION</b>	
<b>PIN</b>	<b>INITIAL FORCE</b>	<b>INITIAL FORCE</b>	<b>PIN</b>
<b>LANGUAGE</b>	<b>PIN</b>	<b>PIN</b>	<b>LANGUAGE</b>
	<b>LANGUAGE</b>	<b>LANGUAGE</b>	<b>LANGUAGE</b>

## SETTINGS - CONFIGURATION

Based on the settings needed, the user follows the instructions below

-  To navigate through sub-menu → keys UP ↑ and DOWN ↓
-  To enter the menu category → keys ENTER

<b>4033 MOTOR TYPE</b>	ENTER → access the menu Use UP ↑ and DOWN ↓ keys for navigation in the submenu SLIDING, SWING, BARRIER, SHUTTER, SHUTTER DEAD-MAN, SHUTTER 2- CHANNELS ENTER → validate the selection
<b>NOTE:</b> Shutter DEAD-MAN	→ Motor works clockwise while pressing remote button UP ↑ → Motor works anticlockwise while pressing remote button DOWN ↓
Shutter 2-channels	→ 1st channel ↑ and STOP → 2nd channel ↓ and STOP
<b>TERMINAL SWITCHES</b>	ENTER → ON                      ENTER → OFF
<b>PHOTOCELL</b>	ENTER → ON                      ENTER → OFF
<b>4 1 1 4 PHOTOCELL 1</b>	ENTER → ON                      ENTER → OFF
<b>4 1 1 4 PHOTOCELL 2</b>	ENTER → ON                      ENTER → OFF
<b>BUTTON</b>	ENTER → NORMAL (start - stop - down) ENTER → ONLY OPEN (In case of barrier) ENTER → INACTIVE
<b>BLINKER</b>	ENTER → FLASH (blinks while motor is moving) <small>while motor is opening=&gt;blinks quickly while motor is closing=&gt;blinks slowly</small> ENTER → STABLE (steady light for 2 minutes)
<b>4 1 1 4 LOCK</b>	ENTER → ON                      ENTER → OFF
<b>4 1 1 4 DELAY TIME (1+2)</b>	ENTER → ON                      ENTER → OFF
<b>SAFETY EDGE</b>	ENTER → ON                      ENTER → OFF <small>when safety edge is cut, the motor is moving clockwise for 2 sec.</small>
<b>4033 BRAKE</b>	ENTER → ON                      ENTER → OFF
<b>DECELARATION</b>	ENTER → OFF ENTER → 50% (DEFAULT value of deceleration) ENTER → 10%-50% (use trimmer of control board to REDUCE deceleration power)

Model 4114:

DEFAULT deceleration time, 2 seconds before end of route.  
Use trimmer of control board to adjust time of  
deceleration.

## SETTINGS - CONFIGURATION

Based on the settings needed, the user follows the instructions below:

### OPERATING TIME

Gate / Gates are in fully closed position

ENTER → access the menu

In case of motor  
with terminal  
switches:

ENTER → the time counter of control board starts

- The LCD screen indicates the seconds of operating time
- The motor starts moving as indicator
- The operating time is saved automatically, when the motor reaches the terminal switch

In case of motors  
without terminal  
switches – physical  
stops

ENTER → the time counter of control board starts

- The LCD screen indicates the seconds of operating time
- The motor starts moving as indicator

ENTER → at the end of the route to SAVE  
the operating time

In case of model  
4114 (2 motors  
installed):

ENTER → the time counter of control board starts for  
MOTOR 1

- The LCD screen indicates the seconds of operating time for MOTOR 1
- The motor 1 starts moving as indicator

ENTER → at the end of the route to SAVE the operating  
time for MOTOR 1

After 1 second, the time counter of MOTOR 2 starts automatically

- The motor 2 starts moving as indicator

ENTER → at the end of the route to SAVE the operating  
time for MOTOR 2

# SETTINGS - CONFIGURATION

## CODIFICATION

ENTER → access the menu

Use UP ↑ and DOWN ↓ keys to navigate the sub-menu

→ ROLLING (KEELOQ) → ENTER  
to validate the selection

→ OPEN ROLLING (KEELOQ) → ENTER  
to validate the selection

The open rolling codification accepts various rolling code remotes from different producers

→ FIXED → ENTER  
to validate the selection

→ PROFELMNET → ENTER  
to validate the selection

PROFELMNET is PN rolling codification

**NOTE:** The automation is able to work with just ONE codification. Two different codification are not supported simultaneously. Total deletion of previous memory is required.

## REMOTES

ENTER → access the menu

### ADD REMOTE CONTROL REMOTELY

Reach the motor of the gate (near position with the motor). Press an operating remote button (already in memory) to start the motor moving and hold it pressed until the motor stops. When it stops, release it and press the new remote button immediately. The new remote is saved. Repeat steps to program more remote controls remotely. When the memory is full, you cannot add more new remotes.

→ SAVE REMOTES → ENTER

The user starts pressing the remotes that he wants to save sequentially. The motor starts moving as indicator of remotes saving.

→ SAVE CHANNEL UP ↑ → ENTER

The user starts pressing the remotes that he wants to save sequentially for shutter command ONLY OPEN

→ SAVE CHANNEL DOWN ↓ → ENTER

The user starts pressing the remotes that he wants to save sequentially for shutter command ONLY CLOSE

Model 4033  
- in case of  
shutter DEAD-MAN  
or 2- CHANNELS

## SETTINGS - CONFIGURATION

**REMOTES** navigate the rest sub-menu with keys UP ↑ and DOWN ↓

→ PEDESTRIAN REMOTE: → ENTER

The user starts pressing the remotes that he wants to save as PEDESTRIAN. The motor starts moving as indicator of remotes saving.

by this remote button, → PEDESTRIAN TIME  
the motor moves for the time

Save and validate the selection → press any key of the  
keyboard

→ TOTAL DELETION → ENTER → YES  
→ ESC → NO

Before the total memory deletion, the LCD screen confirms the deletion

QUESTION: Are u sure → ENTER → YES  
→ ESC → NO

ENTER → access the menu

→ USER DELETION: choose the NUMBER of USER with  
keys UP ↑ and DOWN ↓  
→ ENTER → YES  
→ ESC → NO

User deletion is the ability to delete only one remote of the control board memory

QUESTION: Are u sure → ENTER → YES  
→ ESC → NO

NUMBER USER: when you press a remote, the NUMBER of USER is indicated in the main LCD screen

COMMAND REMOTES → ENTER → YES → ENTER → NO

WIRELESS STORE → ENTER → YES → ENTER → NO

## SETTINGS - CONFIGURATION

### MOTOR DIRECTION

- ENTER → Right
- ENTER → Left

### AUTO-CLOSING

ENTER → Access the menu

ENTER → ON

ENTER → OFF

Use UP ↑ and DOWN ↓ keys for AUTO – CLOSING stand-by or AUTO-CLOSING passage

AUTO-CLOSING → ENTER → the time counter for passage A/C starts

ENTER → SAVE the time

AUTO-CLOSING → ENTER → the time counter for stand-by A/C starts

A/C stand-by >  
A/C passage

ENTER → SAVE the time

ESC → EXIT

### INITIAL FORCE

ENTER → Soft start

ENTER → Normal – based on the trimmer of the control board

ENTER → Full motor power

### PEDESTRIAN TIME

ENTER → the time counter starts, the LCD screen indicates the seconds of PEDESTRIAN TIME

ENTER → save the time

The user needs to define: REMOTES → PEDESTRIAN REMOTE (PAGE 17)

**NOTE:** In case of **41 14:** PEDESTRIAN TIME → is the OPEN of motor 1. When the user defines and saves PEDESTRIAN REMOTE, the motor 1 is only activated

## SETTINGS - CONFIGURATION

<b>PIN</b>	ENTER	→ ON
	ENTER	→ OFF

The PIN is a combination of 4 digit password that locks the automation. Without this PIN, the user is not able to make any adjustment or configuration in the control board.

The user chooses the 4 – digit password with keys UP ↑ and DOWN ↓

ENTER	→ validate the selection
-------	--------------------------

<b>LANGUAGE</b>	ENTER	→ the user can choose the language of the control board
-----------------	-------	---

## TROUBLESHOOTING – INDICATING MESSAGES MAIN LCD SCREEN

### **BUTTON**

→ main LCD screen shows BUTTON, when the user activates it

### **SAFETY EDGE**

→ main LCD screen shows SAFETY EDGE, when the user activates it

### **PHOTOCELL**

→ main LCD screen shows PHOTOCELL, when the user activates it

### **PHOTOCELL 2**

→ main LCD screen shows PHOTOCELL 2, when the user activates it

### **CLOSE TERMINAL SWITCH**

→ check terminal switch

### **OPEN TERMINAL SWITCH**

→ check terminal switch

### **NOT COMPATIBLE REMOTE**

→ wrong remote code – check customer code

### **NOT SAVED REMOTE**

→ the remote is not in the control board memory

### **USER: 000**

→ number of the saved remote

### **OPEN: 5s**

→ the motor will open for 5 seconds

### **OPEN?**

→ the motor is stopped, the next move is OPEN

### **CLOSE: 7s**

→ the motor will close for 7 seconds

### **CLOSE?**

→ the motor is stopped, the next move is CLOSE

### **A/C: 14s**

→ the time counter of auto-closing

### **OPM1: 1s**

→ the motor 1 will open for 1 second

### **OPM2: 1s**

→ the motor 2 will open for 1 second

### **OPM1: ?**

→ the motor 1 is stopped, the next move is OPEN

### **OPM2: ?**

→ the motor 2 is stopped, the next move is OPEN

### **CLM1: 1 s**

→ the motor 1 will close for 1 second

### **CLM2: 1 s**

→ the motor 2 will close for 1 second

### **CLM1: ?**

→ the motor 1 is stopped, the next move is CLOSE

### **CLM2: ?**

→ the motor 2 is stopped, the next move is CLOSE



[www.profelmnet.com](http://www.profelmnet.com)